



Creation		Revision	
date:	11-JUL-08	date:	14-OCT-08
by:	Ivon LeBlanc	by:	Ivon LeBlanc

## Shut Off System Upgrade Kit

### Kit Contents

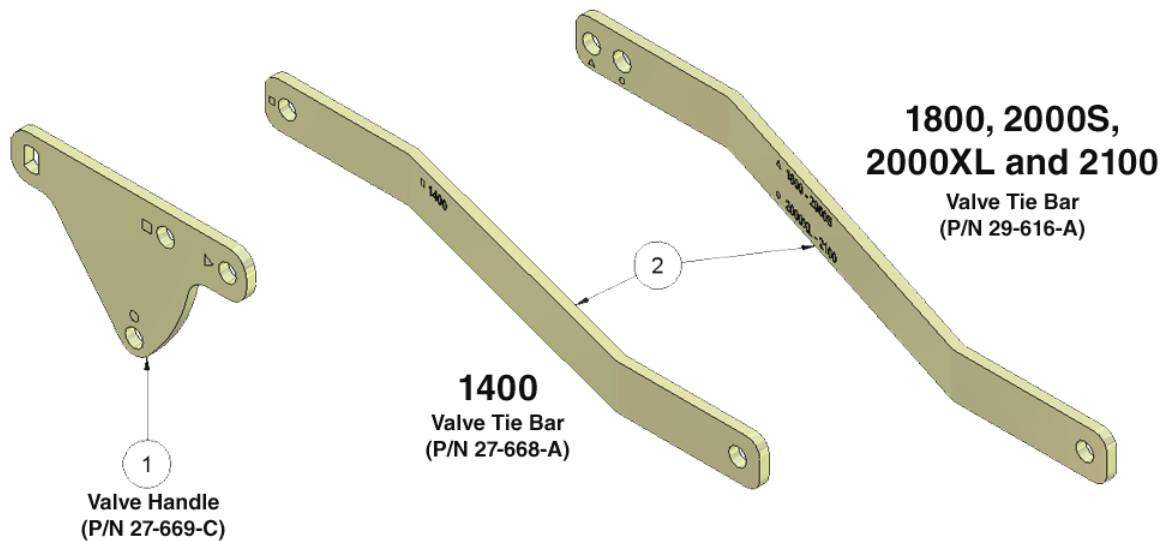


Figure 1 - Kit Contents

img-00388-A

Please complete the following instructions to improve your Mini-Traveller shut off linkage.

### Step 1

Remove existing shut off linkage pieces (Qty 2) and set fasteners aside for later use.

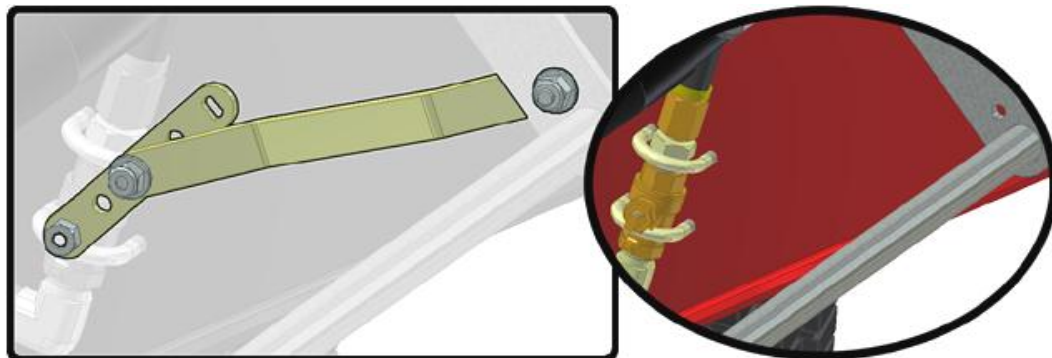



Figure 2 - Remove Existing Linkage

img-00387

## Step 2

Install the Valve Handle (Item 1) to the ball valve.

- = 1400
- △ = 1800 and 2000S
- = 2000XL and 2100

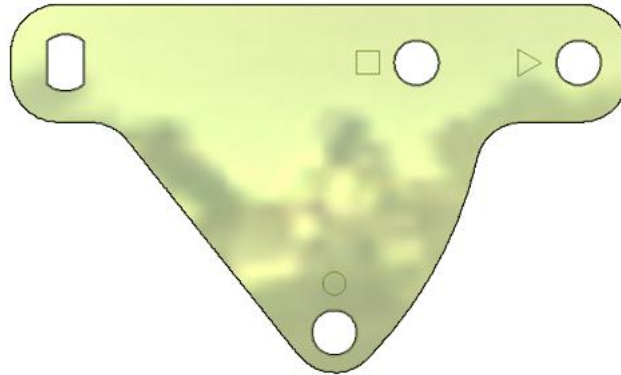


*Figure 3 - Valve Handle Installation*

*img-00389-A*

Re-use the valve nut and ensure the handle is in the upright position.

## Step 3

Based on your model, line up the proper symbols and fasten the Valve Tie Bar (Item 2) using the existing fasteners.

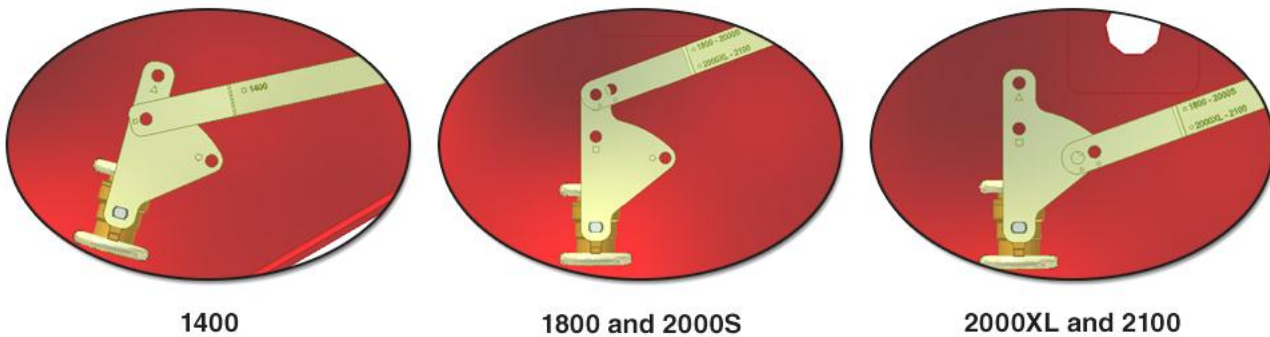

1400

1800 and 2000S

2000XL and 2100

*Figure 4 - Valve Tie Bar Installation*

*img-00390*

## Step 4

Start your machines drive system and test the new shut off linkage. When testing is complete your machine is ready for use. If you have any questions please contact **Cadman Power Equipment Limited** or your local dealer.

**Congratulations you have successfully upgraded you Mini-Traveller shut off linkage.**